 


RunCam 4 Airsoft

User Manual

Instruction Diagram

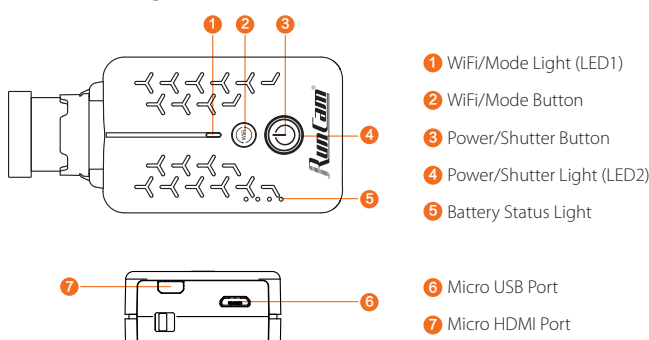

Charging

Micro USB port supports DC 5-15V power supply. A DC 5V1~2A charger is recommended. The Power/Shutter Light (red) will turn on during charging and turn off when charging is complete. It takes about 2 hours to get fully charged.

Battery Status

● ● ● ●	● ● ●	● ●	●	Blink ●
>75%	<75%	<50%	<25%	<10%

MicroSD Card

Use brand name memory cards (sold separately) that meet these requirements:


- microSD, microSDHC, or microSDXC
- U1(UHS-I) or above
- Capacity up to 128GB

Please format the card to exFAT/FAT32 and set "Allocation unit size" to 32KB/64KB.

Basic Camera Operation

Powering On/Off	• Long press the Power/Shutter button
WiFi On/Off	• Short press the WiFi/Mode button If the WiFi/Mode Light (LED1) blinks blue, it means it is ready to be connected and it will stop blinking and become always on after being connected. Default SSID: RUNCAM4_***** (* for letters or numbers) Default WiFi password: 1234567890
Mode Switching	• After powering on, long press the WiFi/Mode button to cycle among the three modes: Video/Photos/OSD setting.
Video Mode	Power/Shutter Light (LED2): Blue • Press the Power/Shutter button to start/stop recording.
Photo Mode	Power/Shutter Light (LED2): Green • Press the Power/Shutter button to capture photos.
OSD Setting Mode	WiFi/Mode Light (LED1): Orange • Press the Power/Shutter button to browse. • Press the WiFi/Mode button to select. • Long press the WiFi/Mode button to exit the current menu.
Forced Shutdown	• Long press the Power/Shutter Button 16 seconds or remove the battery.
Reset	• In standby mode, press the WiFi/Mode button three times in two seconds. Power/Shutter light will flash one time. Then camera will restart automatically.

 
Connection to computer

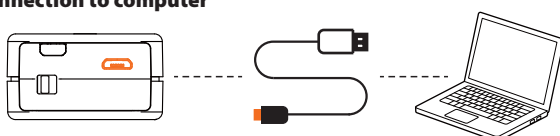

After turning on the camera, connect it to the computer via USB cable, then it will be recognized as a removable disc.

NOTICE: If the camera can not be recognized by the computer after connecting, please make sure that a microSD card is well inserted. If the information on microSD card can not be read normally, please try with another micro USB cable or USB port on the computer.

 App

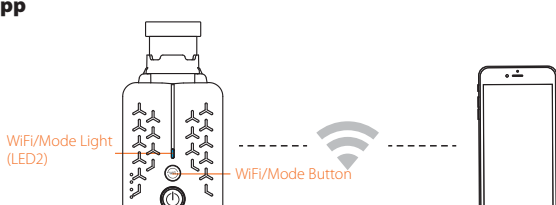

1. After powering on, press the WiFi/Mode button, the WiFi/Mode Lights (blue) blink when the WiFi is on and ready to connect.
2. In the wireless network settings of your smartphone, find the SSID connection of the RunCam 4 and enter the password. After the successful connection, the WiFi/Mode Lights (blue) will be constantly on.

Android and iOS APP: Search 'RunCam App' on Google Play/App Store, or download on our website: <https://runcam.com/download/runcam4as>

Firmware upgrade

To ensure that the camera performs optimally, please use the latest firmware.

Update method here: <https://runcam.com/download/runcam4as>.

Parameter

Field of View (FOV)	FOV 10°
Video Resolution	4K@30fps / 2.7K@60fps / 1080p@100fps / 1080p@60fps / 1080p@50fps / 1080p@30fps / 720p@200fps
Video File Format	MP4
Image Resolution	8MP
TV Mode	NTSC (720*480) / PAL (720*576) Switchable
Interface	Micro USB / Micro HDMI
Max Micro SD Card Supported	128G, (U1(UHS-I) or above)
Battery Capacity	850mAh
USB Power Input	DC 5-15V
Working Current	580mA @5V
Dimensions	84*40*22mm
Weight	66g (with battery)

Technical Support

Please visit: <https://support.runcam.com>