


RunCam 5

User Manual

Instruction Diagram

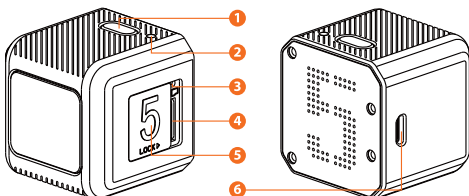

- 1 Shutter Button
- 2 Camera Status Light (LED)
- 3 Reset Button
- 4 SD Card Slot
- 5 SD Card Locking Door
- 6 Micro USB Port

Charging

Micro USB port supports DC 5-15V power supply. A DC 5V1~2A charger is recommended. The Red LED will turn on during charging and turn off when charging is complete. It takes about 2 hours to get fully charged.

Low Battery Warnings

When powered on, if the charge is less than 25%, the Blue LED will continue to flash for 3 seconds.

Basic Camera Operation

Powering On/Off	• Long press the Shutter button with Green LED on, the camera is under standby mode.
Recording On/Off	• In standby mode, click the Shutter button, with LED blinking, recording starts. Click again, recording stops, LED constantly on.
Blue/Green LED Mode Switch	• Double-click the Shutter button.
Forced Shutdown	• Simultaneously press the Shutter button and Reset button.
Formatting	• In standby mode. Triple-click the Reset button, with a long beep and Green LED blinking three times.
Reset	• In standby mode. Long press the Reset button, with three beeps and Blue LED blinking three times.


Parameter Setting

Method one (Recommended): Web parameter tuning tool: <http://app.runcam.com/runcam5/>
 Method two: Through configuration file (CameraConfig.ini) on the micro SD card. Operating details are provided in the file.

microSD Card


Insert the microSD card as indicated by the icon next to the card slot. Use brand name memory cards (sold separately) that meet these requirements:

- microSD, microSDHC, or microSDXC
- U3 recommended (2.7K50/1080P120 requires U3 or above; other resolutions require U1 or above)
- Capacity up to 128GB

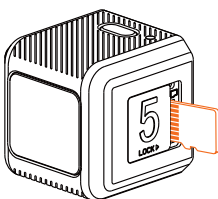

NOTICE: Use carefully when handling memory cards. Avoid liquids, dust, and debris. As a precaution, power off the camera before inserting or removing the card. Check manufacturer guidelines regarding use in acceptable temperature ranges.

Connection to Computer

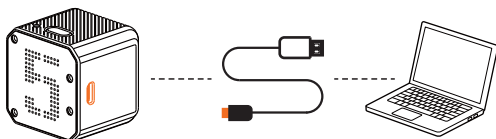

After turning on the camera, connect it to the computer via USB cable, then it will be recognized as a removable disc.

NOTICE: If the camera can not be recognized by the computer after connecting, please make sure that a microSD card is well inserted. If the information on microSD card can not be read normally, please try with another micro USB cable or USB port on the computer.

Firmware Upgrade

To ensure that the camera performs optimally, please use the latest firmware. Update method here: <https://runcam.com/download/runcam5>.

Video Bitrate and Codec

Resolution	Video Quality			Codec
	High	Medium	Low	
4K@30fps	60Mbps	50Mbps	40Mbps	H.264
2.7K@50fps	60Mbps	50Mbps	40Mbps	H.264
1440P@60fps	40Mbps	30Mbps	20Mbps	H.264
1080P@120fps	60Mbps	50Mbps	40Mbps	H.264
1080P@60fps	30Mbps	22Mbps	18Mbps	H.264

Parameter

Image Sensor	SONY IMX 377 (12MP)
Video Resolution	4k@30fps/2.7K@50fps/1080P@120fps/1080P@60fps/1440P@60fps
Field of View (FOV)	145°
Video File Format	MOV
TV Mode	NTSC (720*480) / PAL (720*576) Switchable
Communication Interface	Micro USB
microSD Card supported	Up to 128G. U3 recommended (2.7K50/1080P120 requires U3 or above; other solutions require U1 or above)
WiFi	Nonsupport
USB Power Input	DC 5-15V
Battery Capacity	950mAh
Power Consumption	Max 620mA @5V
Dimension	38*38*36mm
Net Weight	56g (with battery)

Technical Support

Please visit: <https://support.runcam.com>

Check Complete User Manual

Please visit: <https://runcam.com/download/runcam5>